

Legend

1. Front direction indicator.
2. Front parking lights.
3. Headlamps (high and low beams)
4. Motorcompressor for electropneumatic horns.
5. Horn control relay switch.
6. Engine cooling fan motor.
7. Ignition coil.
8. Oil pressure gage sending unit.
9. Ignition distributor.
10. Spark plugs.
11. Alternator.
12. Engine fan motor thermostatic switch.
13. Front side marker lamps.
14. Heat gage thermostatic switch: sends heat gage pointer to scale end (excessive water temperature) independently of sending unit 18.
15. Insufficient oil pressure indicator sending unit.
16. Engine compartment lamps.
17. Heat gage additional resistor.
18. Heat gage sending unit.
19. Battery.
20. Voltage regulator.
21. Button switch for electrovalve energizing during fast idle rate adjustments.
22. Engine fan motor relay switch.
23. Battery charge indicator relay.
24. Starter motor.
25. Engine compartment lamps jam switch.
26. Electrovalve, exhaust emission control device.
27. Fuses.
28. Switch on clutch pedal for exhaust emission control electropneumatic system.
29. Inspection lamp receptacle.
30. Stop lights switch.
31. Switch, on the hydraulic circuit, for indicator 57.
32. Flasher, direction indicators.
33. Windshield washer motor button switch.
34. Electric pump, windshield washer
35. Windshield wiper motor.
36. Windshield wiper intermittent operation cycling switch unit.
37. Flasher, indicator 57.
38. Outer lighting 2-position switch.
39. Fuel gage.
40. Fuel reserve indicator.
41. Fuel gage light.
42. Parking lights indicator (green).
43. Directional signal arrow tell-tale (green).
44. Speedometer light.
45. Headlamp high beam indicator (blue).
46. Insufficient oil pressure indicator (red)
47. Oil pressure gage light.
48. Oil pressure gage.
49. Battery charge indicator (red).
50. Engine tachometer light.
51. Engine tachometer.
52. Engine water heat gage.
53. Engine water heat gage light.
54. Clock.
55. Clock light
56. Windshield wiper high and low sweep rate control.

57. Brake system effectiveness and hand brake ON indicator(red).
58. Remove key indicator.
59. Vehicular hazard warning signal indicator
60. Panel light rheostatic switch.
61. Jam switch, on left door pillar, for indicator 58.
62. Separate 3-Amp fuse for indicator 58 and its switch.
63. Lock switch.
64. Jam switches, between doors and pillars, for courtesy lights.
65. Headlamp high/low beam change over and how beam flashes switch.
66. Direction indicators switch.
67. Windshield wiper control three position switch.
68. Electropneumatic horn control button.
69. Electrofan 3-position switch.
70. Electric cigarette lighter (with housing indicator).
71. Vehicular hazard warning signal switch.
72. Courtesy light, with incorporated switch.
73. Electrofan motor, two-speed.
74. Switch, on transmission (3rd and 4th gears) for exhaust emission control electropneumatic system.
75. Fuel gage sending unit.
76. Linage compartment lamp jam switch.
77. Back-up light switch.
78. Switch, on hand brake lever, for indicator 57.
79. Luggage compartment lamp.
80. Rear side marker lamps.
81. Rear direction Indicators
82. Rear stop lights.
83. Rear parking lights.
84. Back-up lights.
85. Number plate lights.

Cable Color Code

Arancio = Orange
 Azzurro = Light blue
 Giallo = Yellow
 Grigio = Grey
 Rosa = Pink
 Rosso = Red
 Bianco = White
 Blu = Dark blue
 Marrone = Brown
 Nero = Black
 Verde = Green
 Viola = Violet