



SPIDER 2000 - 1979


Wiring Diagrams

FIAT MOTORS OF NORTH AMERICA, INC.


Table of Contents

| CIRCUITS | PAGE |
|---|------|
| Ignition, starter, alternator, engine cooling fan, idle shutoff solenoid, gulp valve electrovalve, and power distribution circuits | 1 |
| Starter circuit – automatic transmission | 2 |
| High and low beams circuits | 3 |
| Parking, license plate, side marker, and panel lights circuits | 4 |
| Hazard and turn signal, back-up, and stop lights circuits | 5 |
| Instruments, indicators, seat belt and remove key warning, courtesy light, clock, and socket circuits | 6 |
| Windshield washer/wiper, heater, horn, and cigarette lighter circuits | 7 |
| Power windows and radio circuits | 8 |
| Component Index | 9/10 |


Ignition, Starter, Alternator, Engine Cooling Fan, Idle Shutoff Solenoid, Gulp Valve Electrovalve, and Power Distribution Circuits

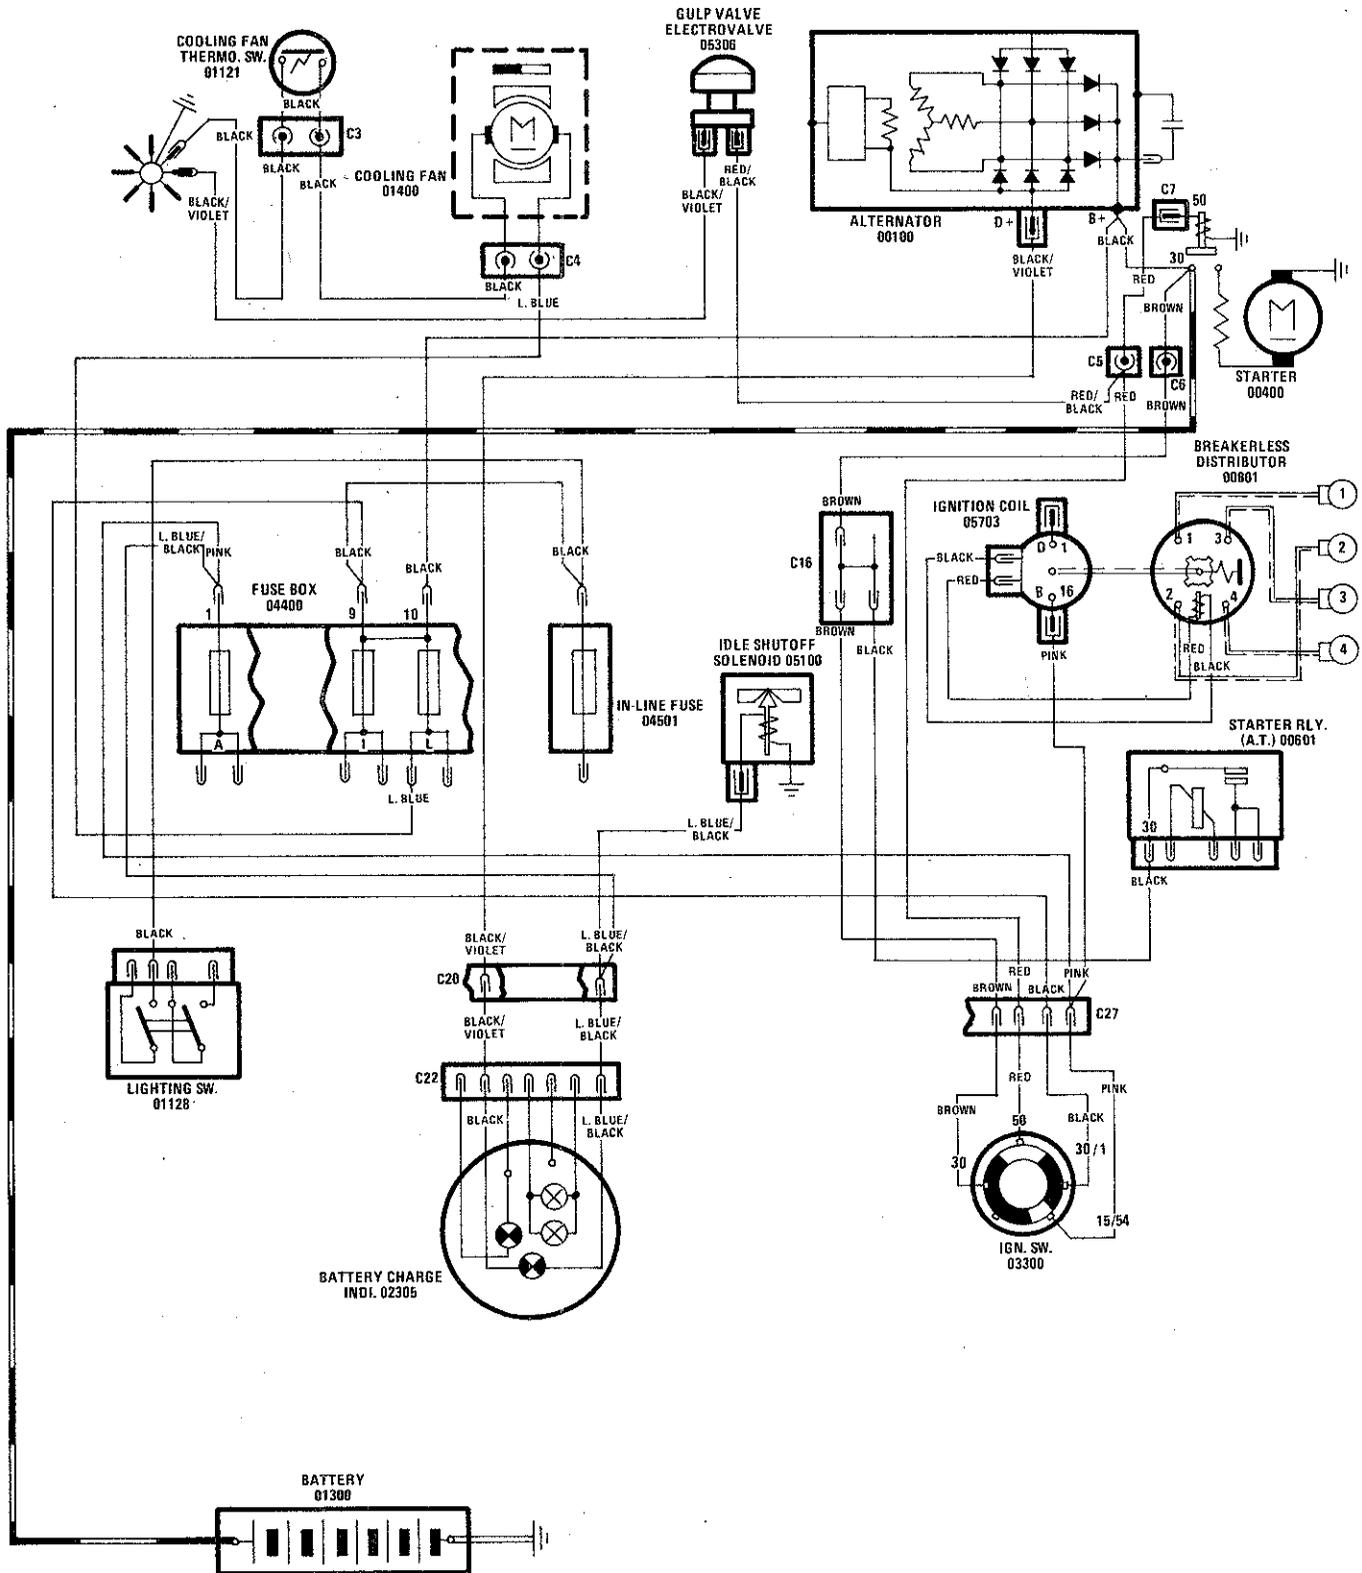


Starter Circuit – Automatic Transmission

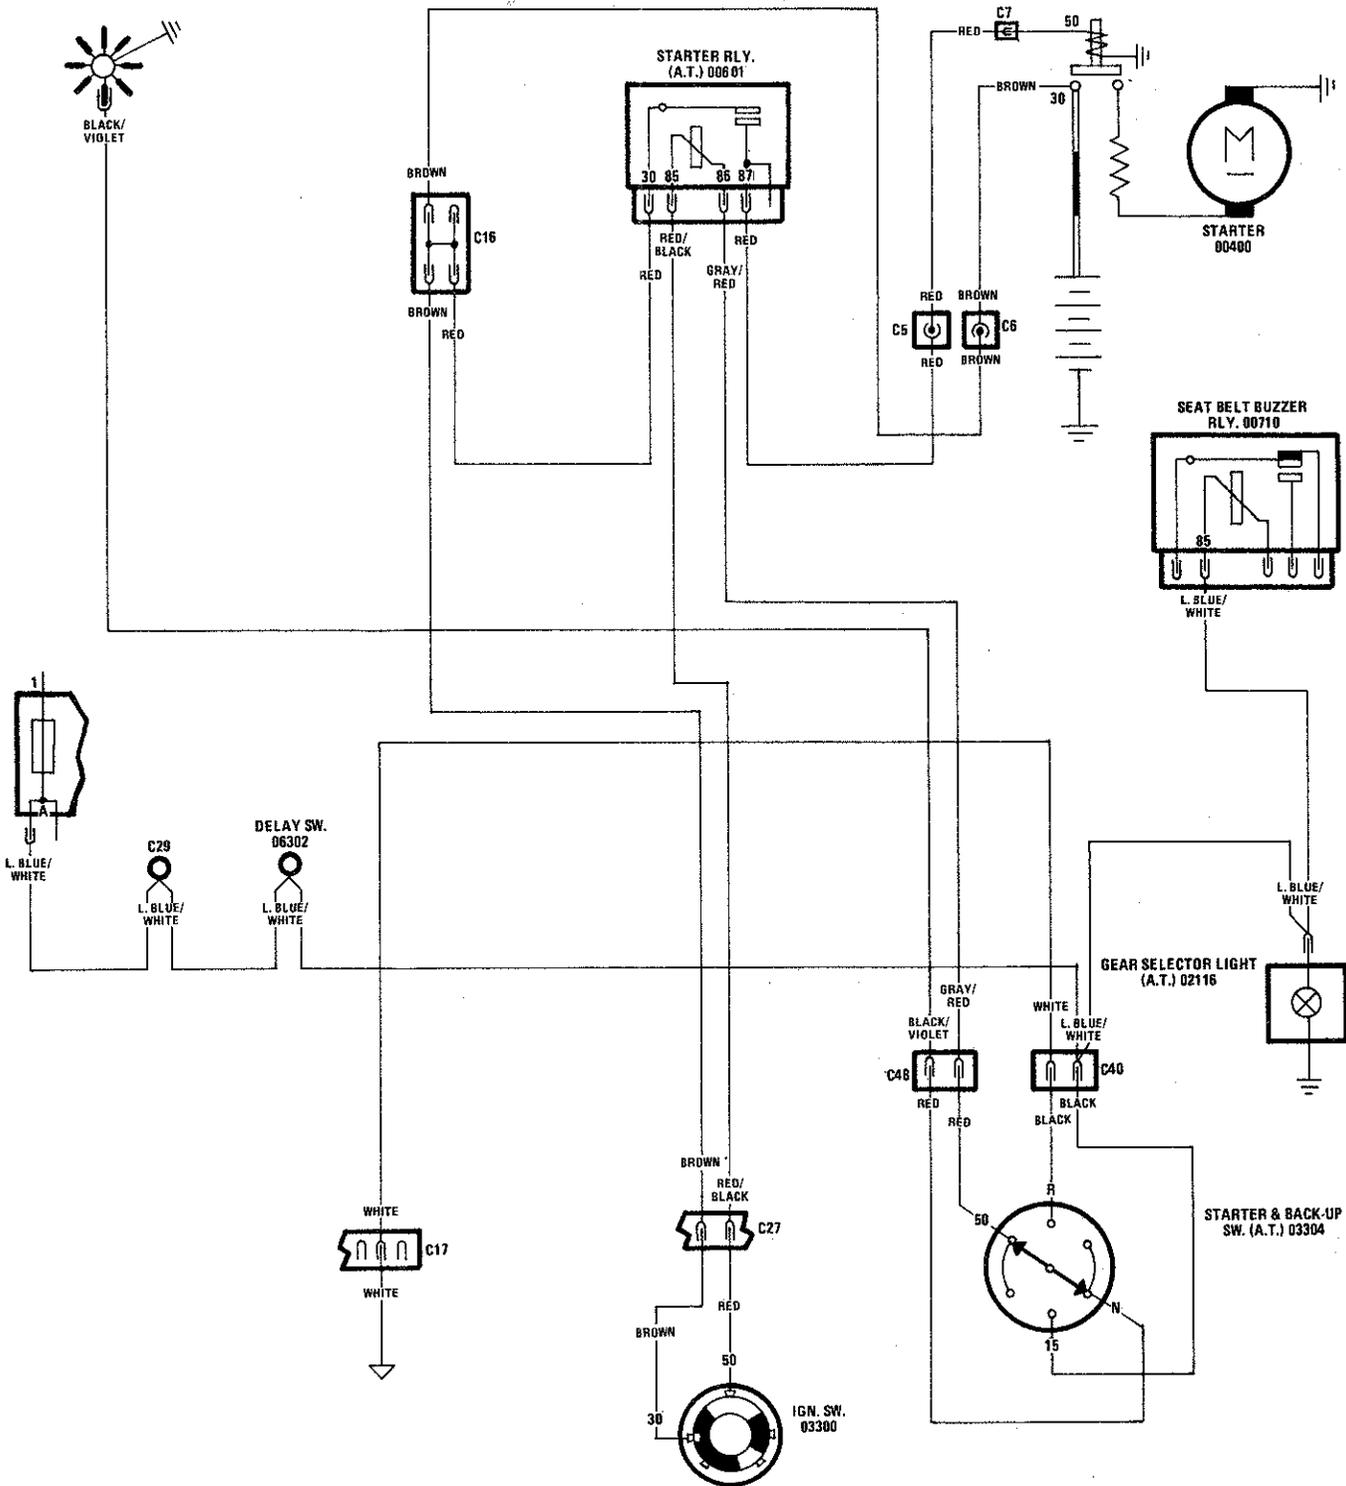


High and Low Beams Circuits

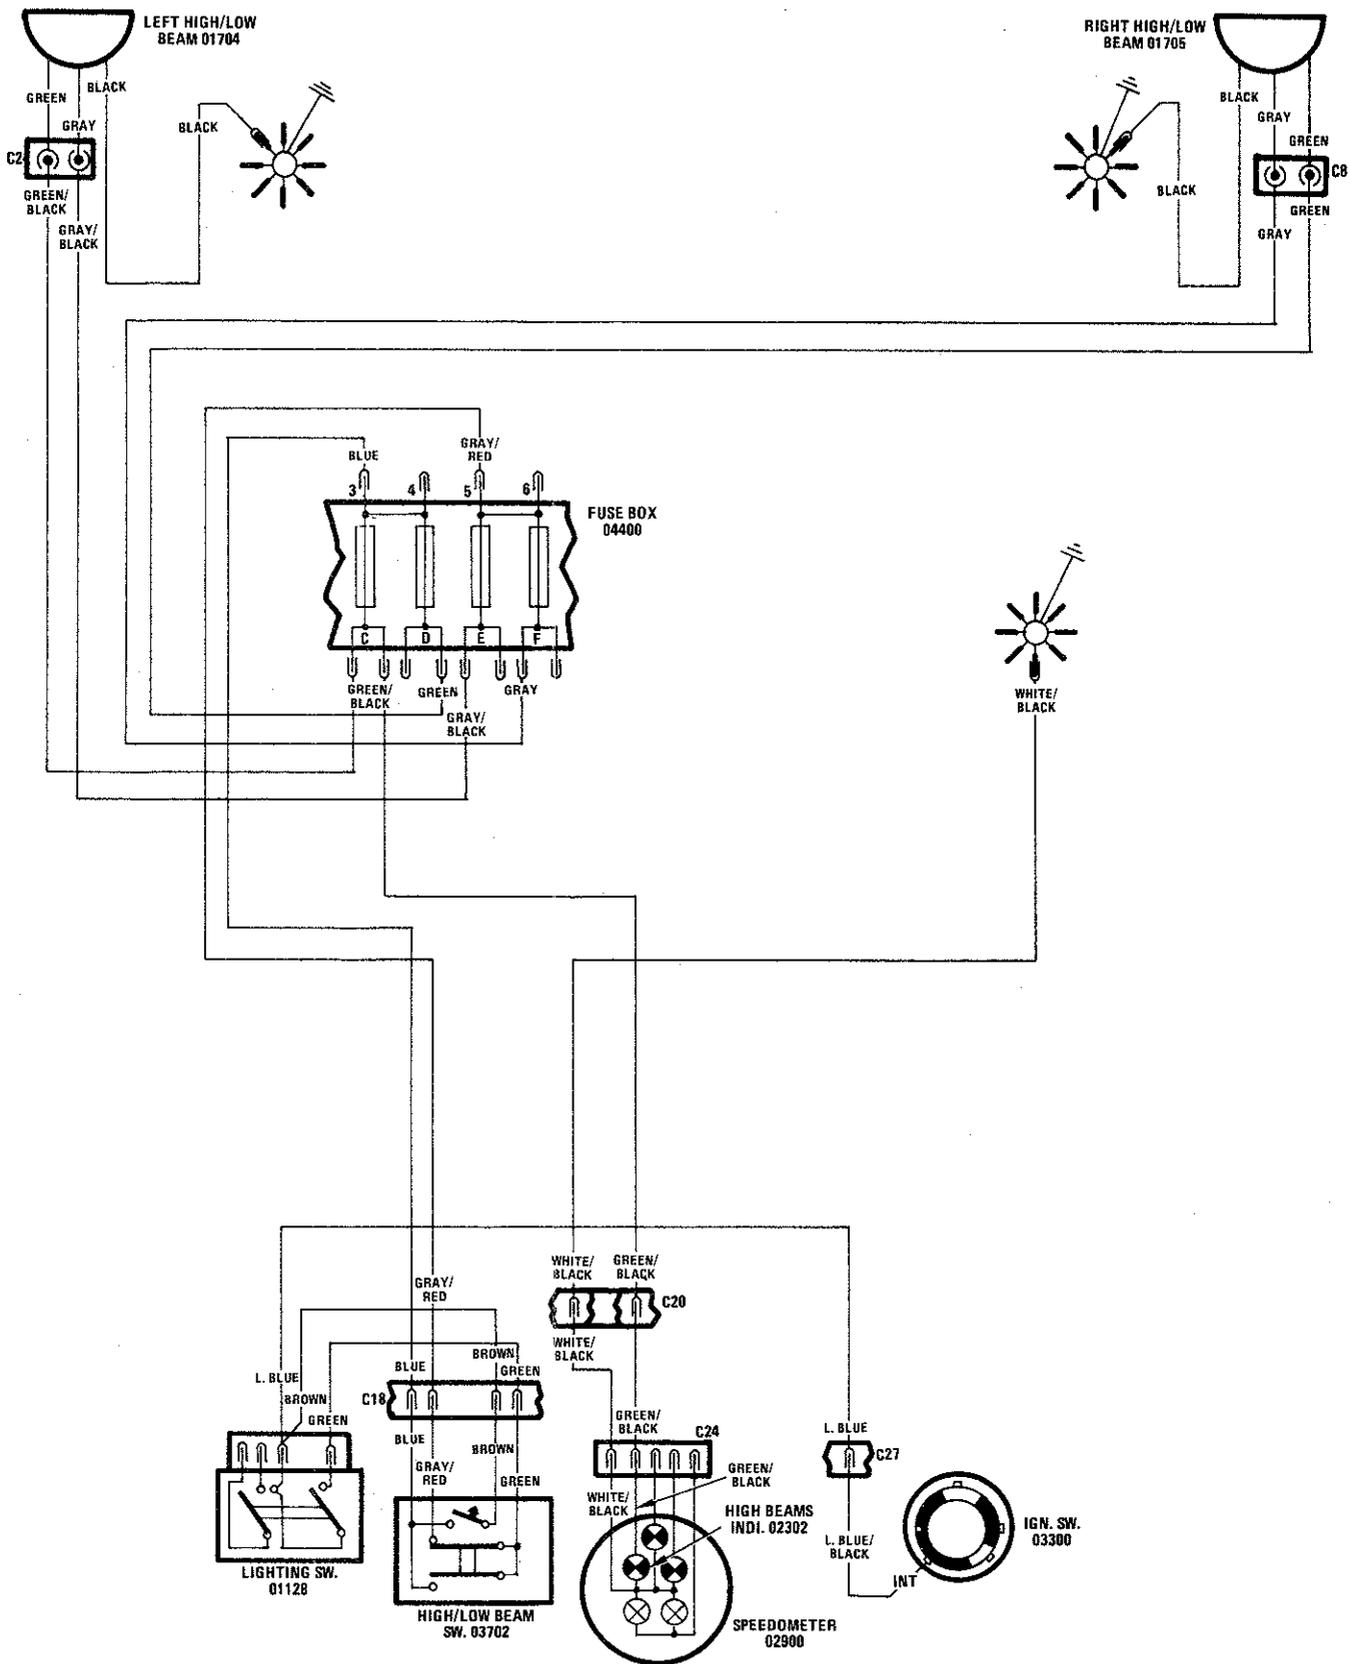


Parking, License Plate, Side Marker, and Panel Lights

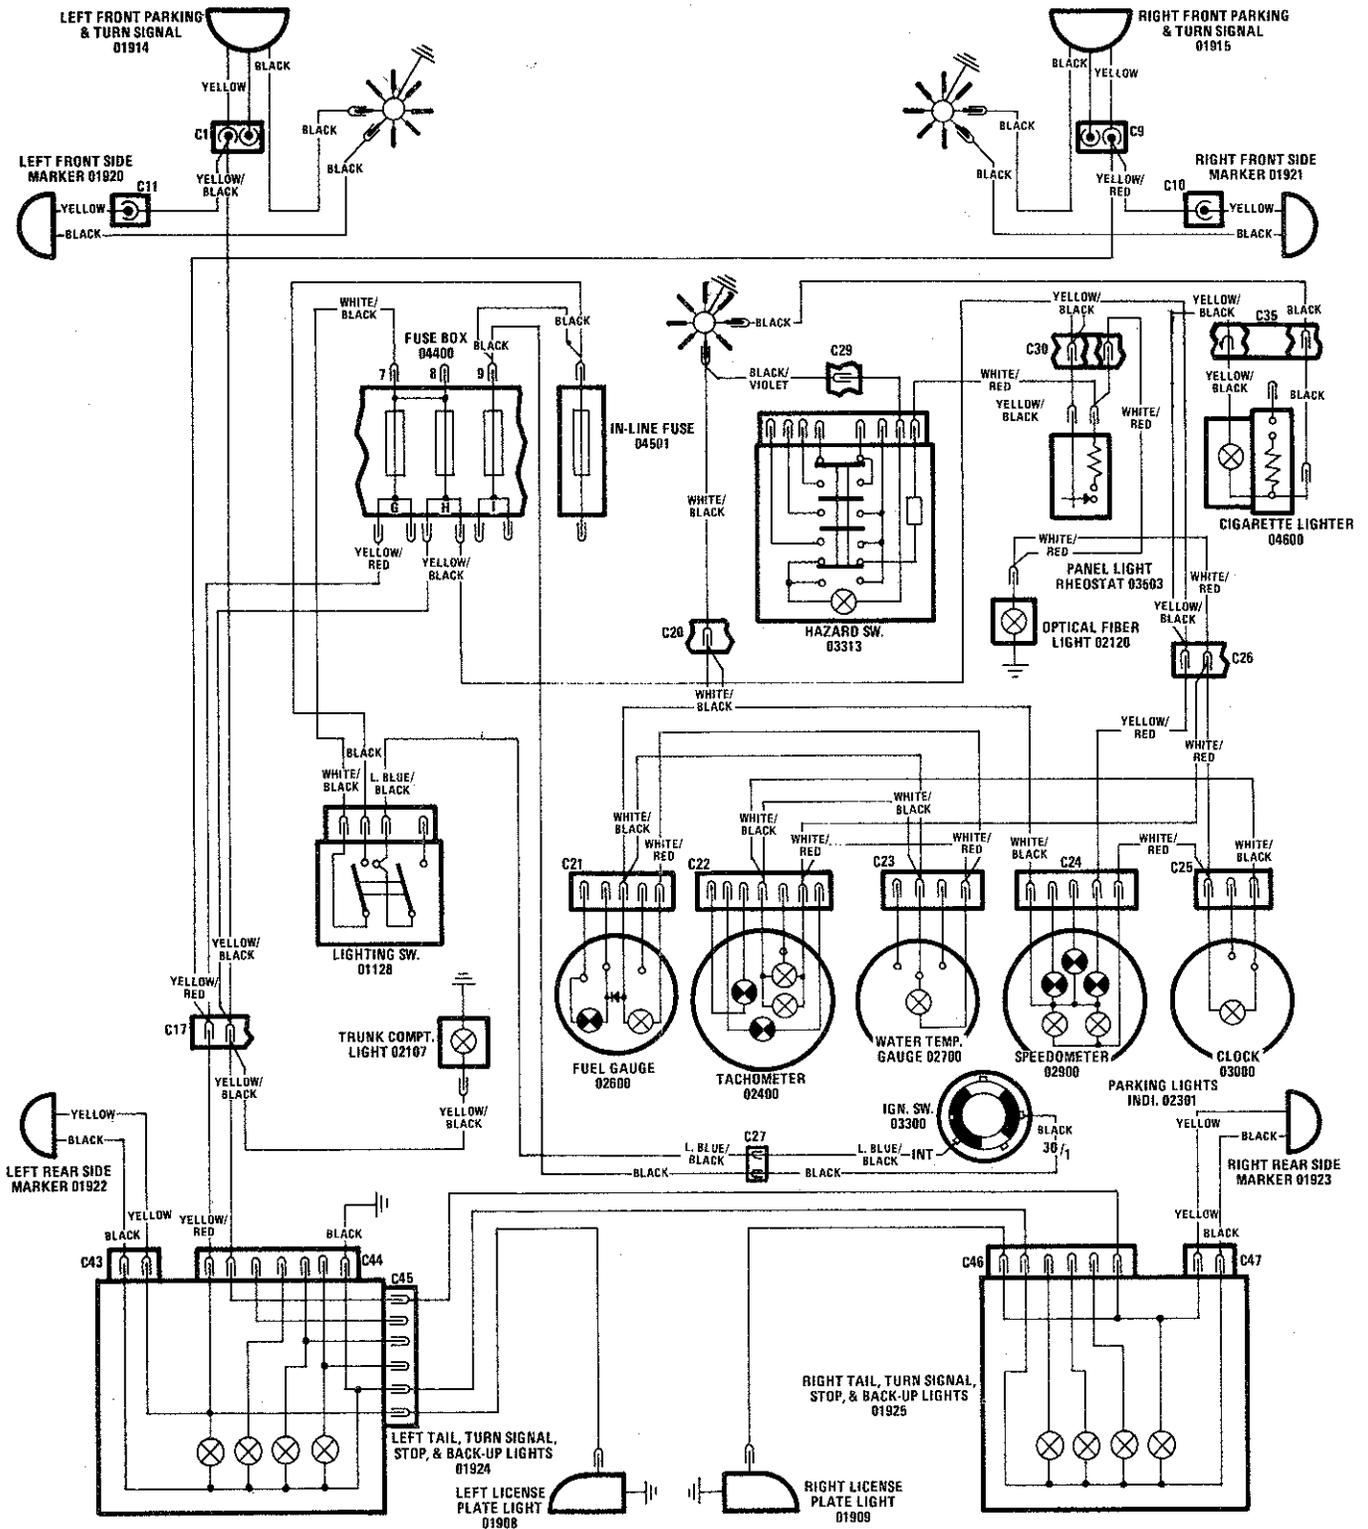


Hazard and Turn Signal, Back-Up, and Stop Lights Circuits

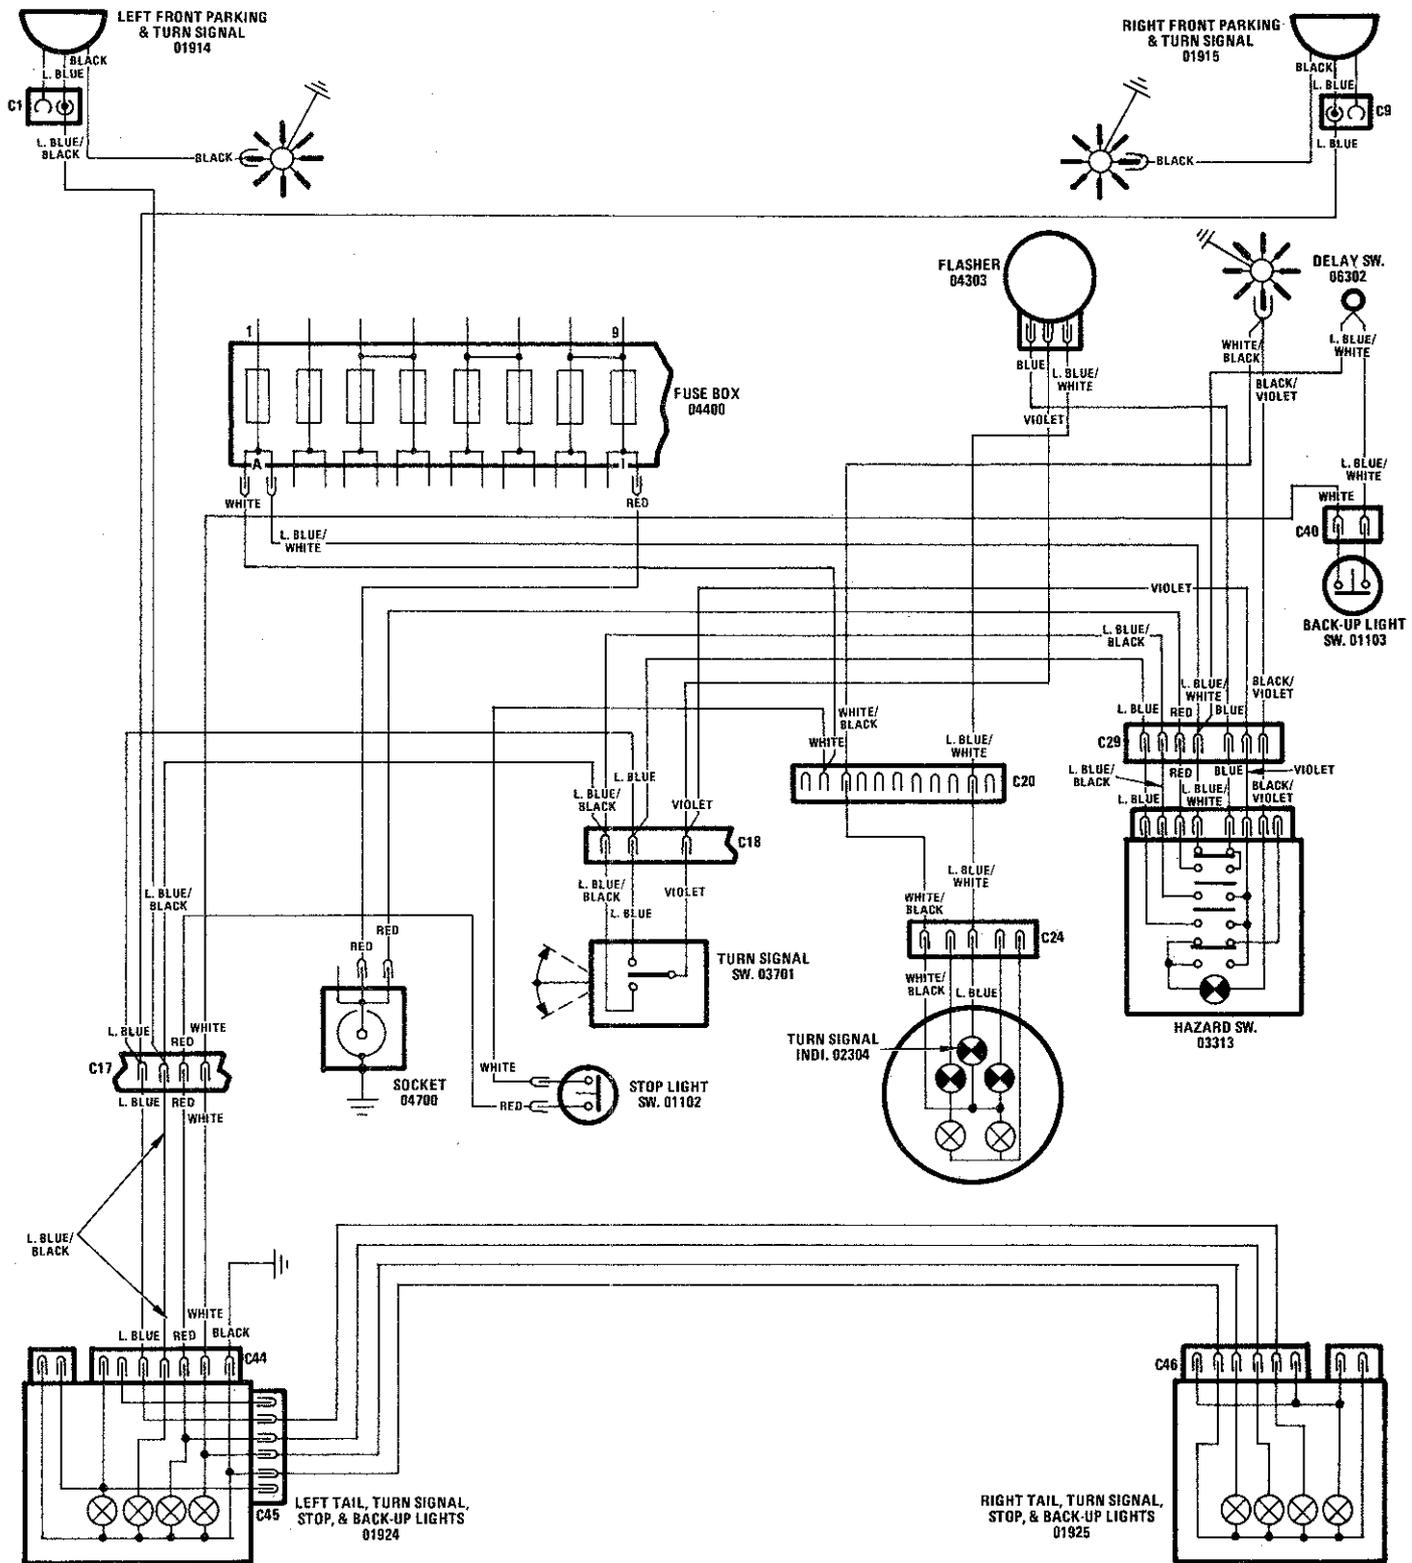


Instruments, Indicators, Seat Belt and Remove Key Warning, Courtesy Light, Clock, and Socket Circuits

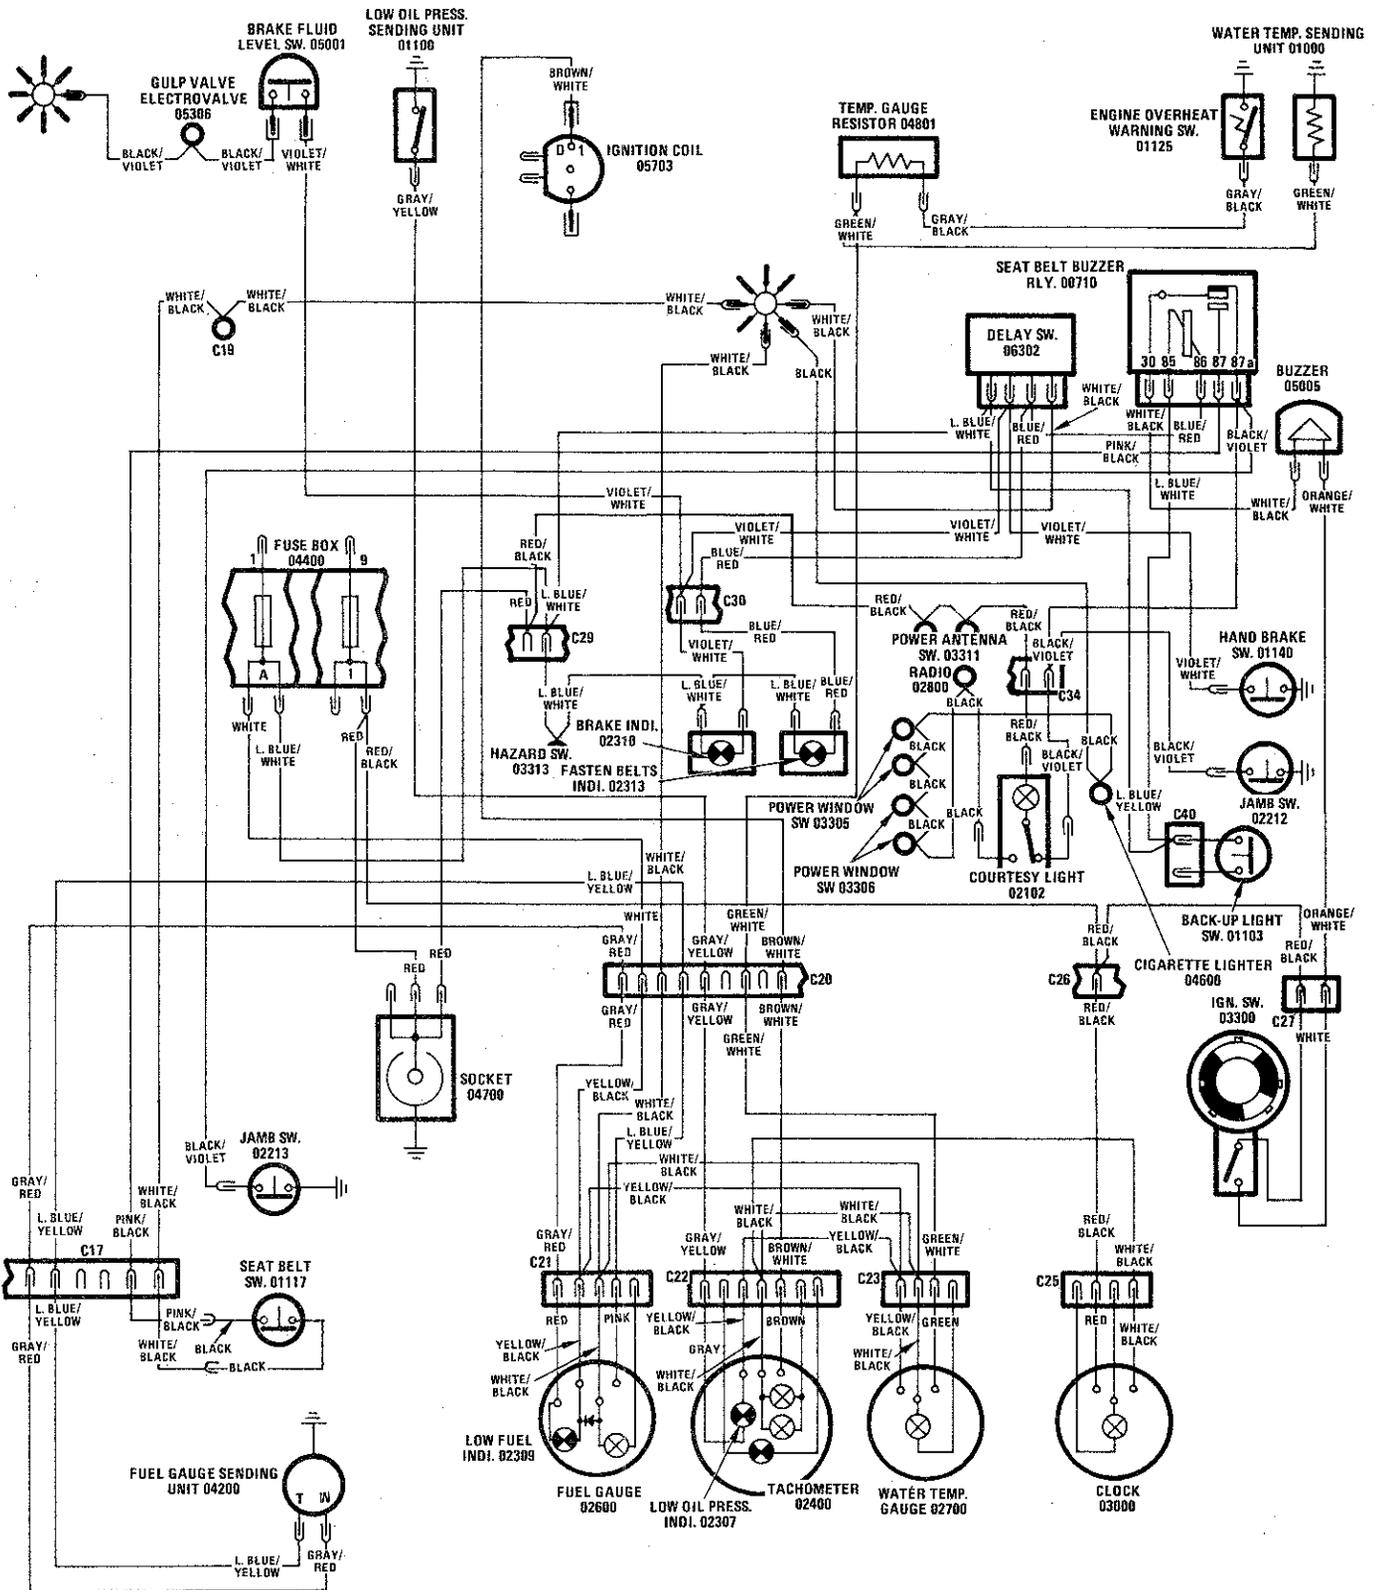

Windshield Washer/Wiper, Heater, Horn, and Cigarette Lighter Circuits

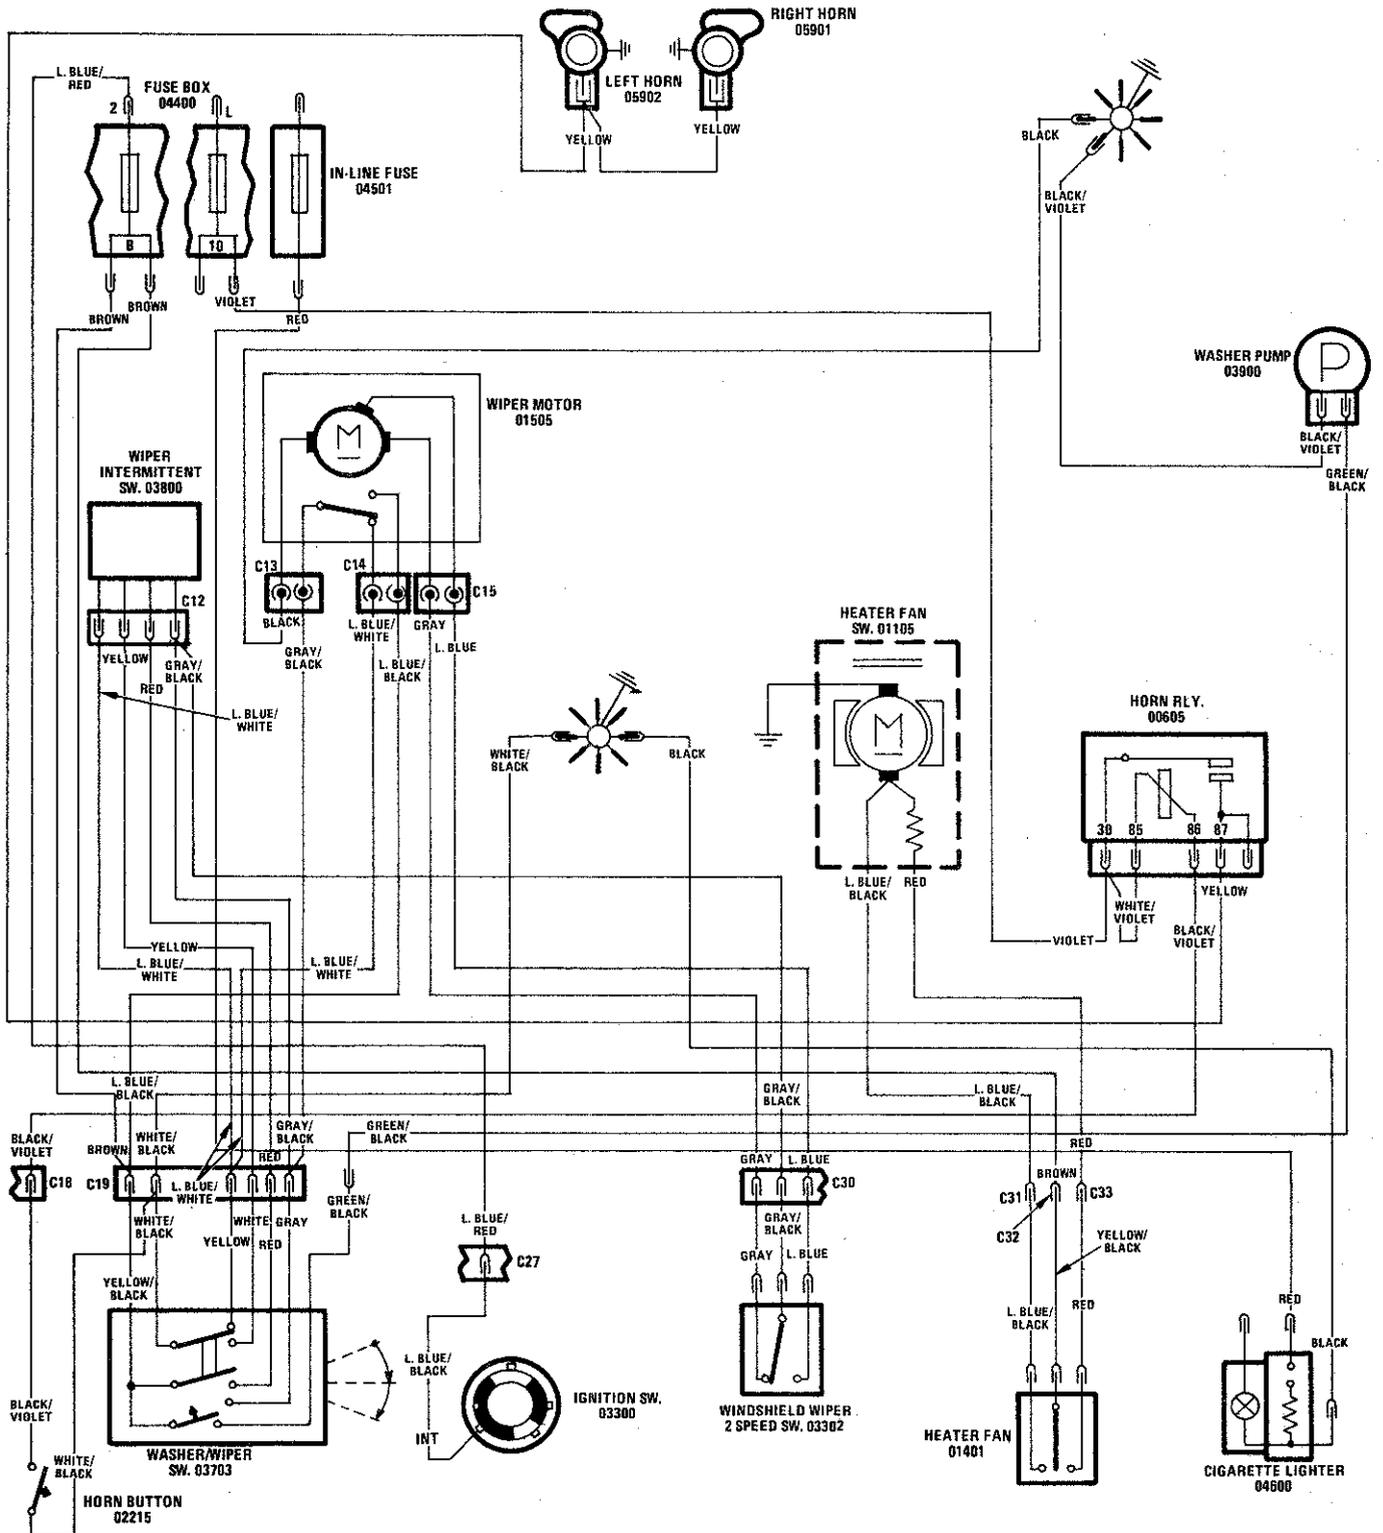

Power Windows and Radio Circuits

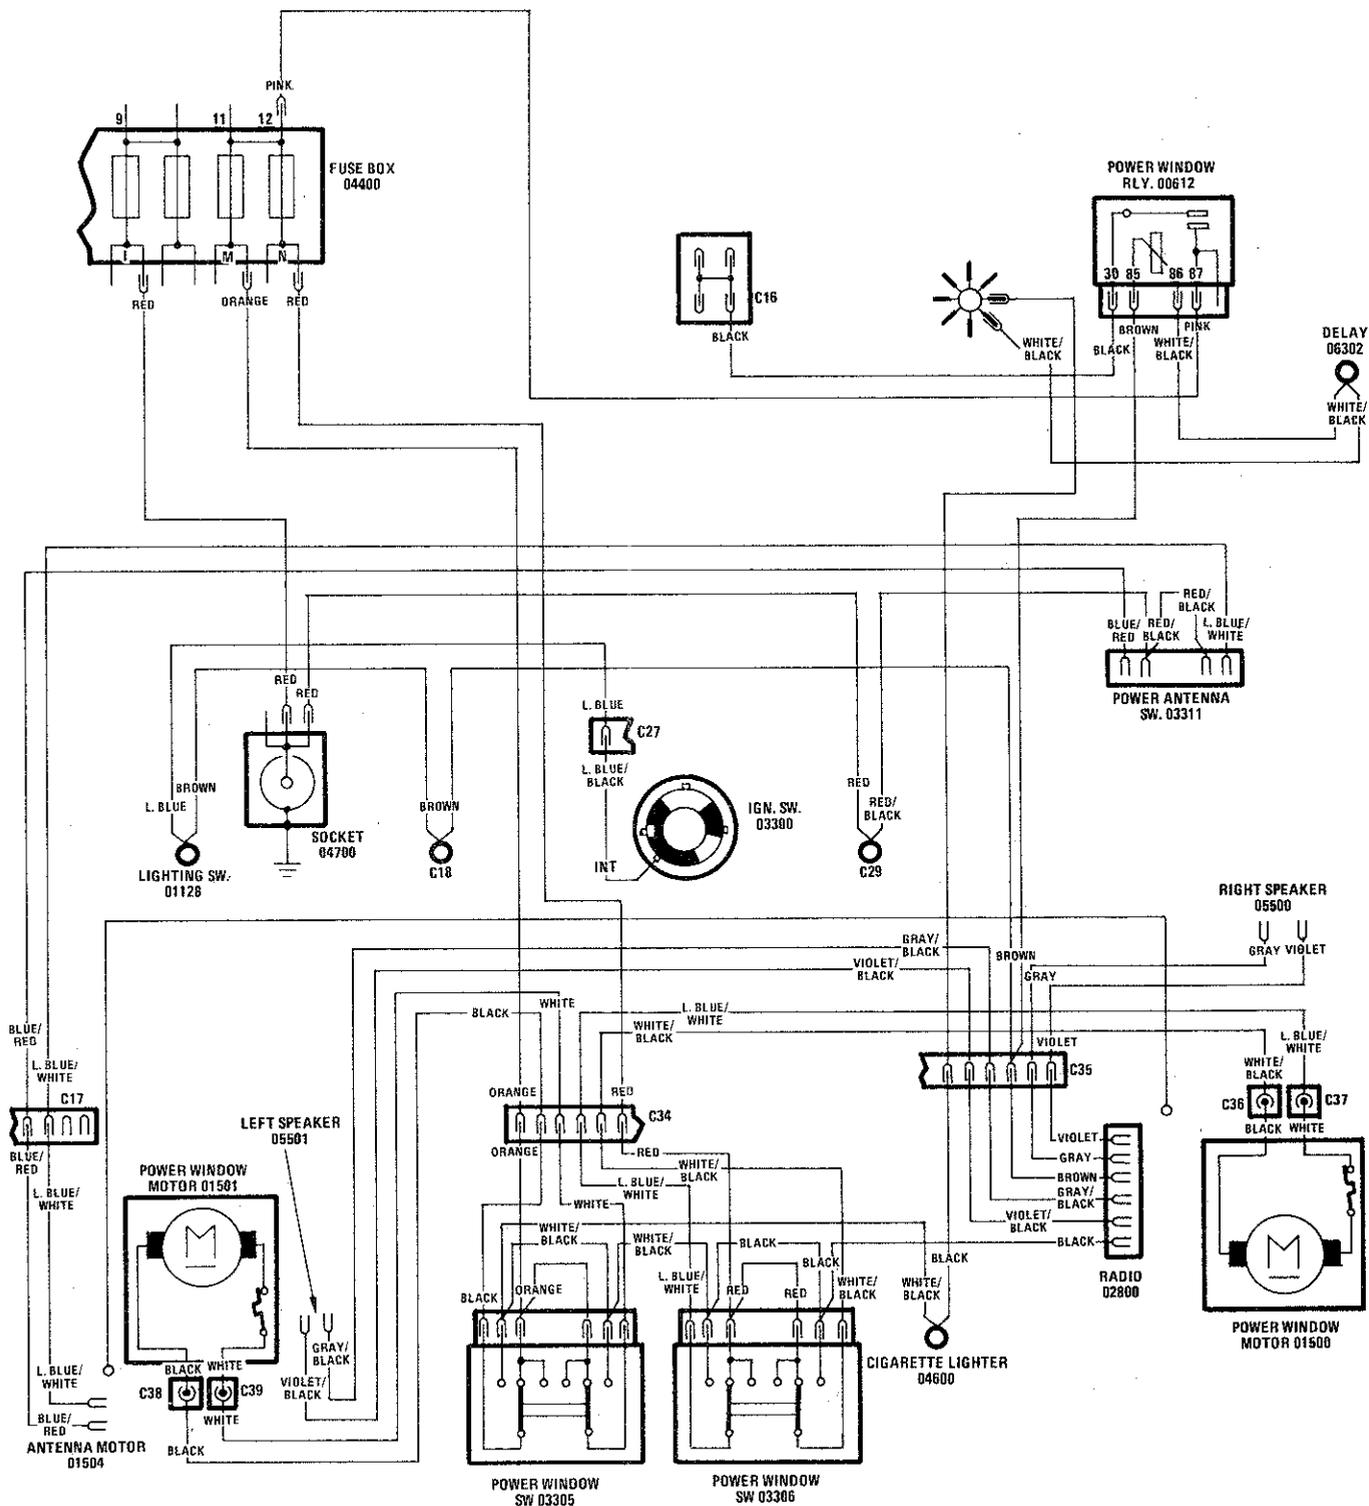

Component Index

| | | | |
|-------|---|-------|--|
| 00100 | Alternator | 02302 | High beams indicators |
| 00400 | Starter | 02304 | Turn signal indicator |
| 00601 | Starter relay (automatic transmission) | 02305 | Battery charge indicator |
| 00612 | Power windows relay | 02307 | Low oil pressure indicator |
| 00605 | Horn relay | 02309 | Low fuel indicator |
| 00710 | Seat belt buzzer relay | 02310 | Brake system effectiveness indicator |
| 00801 | Brakerless ignition distributor | 02313 | Fasten seat belts indicator |
| 01000 | Engine water temperature gauge sending unit | 02400 | Tachometer |
| 01100 | Low oil pressure indicator sending switch | 02600 | Fuel gauge |
| 01102 | Stop light switch | 02700 | Engine water temperature gauge |
| 01103 | Back-up light switch | 02800 | Radio |
| 01105 | Heater fan switch | 02900 | Speedometer |
| 01117 | Switch on driver's seat belt | 03000 | Clock |
| 01121 | Cooling fan thermostatic switch | 03300 | Steering lock ignition switch |
| 01125 | Engine overheat warning switch | 03302 | Windshield wipers rheostat |
| 01128 | Lighting switch | 03304 | Starter and back-up light switch (automatic transmission) |
| 01140 | Hand brake "ON" switch | 03305 | Power window switch |
| 01300 | Battery | 03306 | Power window switch |
| 01400 | Cooling fan motor | 03311 | Power antenna switch |
| 01401 | Heater fan motor | 03313 | Hazard warning signal switch |
| 01500 | Power window motor | 03503 | Ideogram light rheostat |
| 01501 | Power window motor | 03701 | Turn signal indicator switch |
| 01504 | Antenna motor | 03702 | High/low beams changeover switch |
| 01505 | Windshield wiper motor | 03703 | Wiper/washer switch |
| 01704 | Left low beam | 03800 | Windshield wiper intermittent switch |
| 01705 | Right low beam | 03900 | Windshield washer pump |
| 01908 | Left license plate light | 04200 | Fuel gauge sending unit |
| 01909 | Right license plate light | 04303 | Turn signal and hazard flasher |
| 01914 | Left front parking and turn signal light | 04400 | Fuse box |
| 01915 | Right front parking and turn signal light | 04501 | In-line fuse for cigarette lighter |
| 01920 | Left front side marker light | 04600 | Cigarette lighter |
| 01921 | Right front side marker light | 04700 | Electrical sockets |
| 01922 | Left rear side marker light | 04801 | Water temperature gauge indicator resistor |
| 01923 | Right rear side marker light | 05001 | Brake fluid level switch |
| 01924 | Left tail, turn signal, stop and back-up light | 05005 | Fasten seat belts and remove key buzzer |
| 01925 | Right tail, turn signal, stop and back-up light | 05100 | Idle shutoff solenoid |
| 02102 | Passenger compartment light — with switch on dashboard | 05306 | Electrovalve for gulp valve |
| 02107 | Trunk compartment light | 05500 | Right radio speaker |
| 02120 | Optical fiber illumination light source | 05501 | Left radio speaker |
| 02212 | Courtesy light jamb switch — right door | 05703 | Ignition coil assembly |
| 02213 | Courtesy light jamb switch — left door | 05901 | Right horn |
| 02215 | Horn button | 05902 | Left horn |
| 02301 | Parking lights indicator | 06302 | Delay switch — seat belt indicator |